

stats

The stats object shows statistics for cpu, mem, and active volumes.

Usage

```
show stats [cpu=all] | [mem=all] | [volume=<volname>|*] | [controller=iscsi|fc|fc<n>]  
interval=<intervalValue>
```

Examples

```
mayacli show stats cpu=all  
mayacli show stats mem=all  
mayacli show stats vol=testvol
```

Output

```
# mayacli show stats cpu=all  
user           nice          sys        idle      iowait      steal      hardirq  
softirq        guest         1374      1432520     771  
2033           9  
  
# mayacli show stats controller=iscsi interval=5  
reads    seqhits writes   seqhits breads hits    miss     uread    uwrtite   vread    vwrtite   rdmodwr psleeps rsleeps  
wsleeps locked
```