

# performance

The performance object shows performance information for active volumes.

## Usage

```
show perf    [volume=<volname>|*] [controller=iscsi|fc|fc<n>]
              [mem=all] [cpu=all|cpuN]
              interval=<intervalValue>
```

## Examples

```
mayaccli show perf controller=fc1

mayaccli show perf controller=iscsi

mayaccli show perf volume=testvol1
```

## Output

```
mayaccli show perf cpu=all
%user    %system  %iowait   %idle
0.00      0.00     0.00     100.00
0.00      0.00     0.00     100.00

mayaccli show perf mem=all
used      buff      cache      free      swapused   swapfree
380492    2068      248368    6863552   0          0
used      buff      cache      free      swapused   swapfree
380508    2068      248368    6863536   0          0
used      buff      cache      free      swapused   swapfree
380508    2068      248368    6863536   0          0

mayaccli show perf controller=iscsi
read/sec  write/sec  IOPS
0         0         0
0         0         0
0         0         0
0         0         0
```